SS-110 Keypad Quick User Guide With Wiring Example to Electric Gates
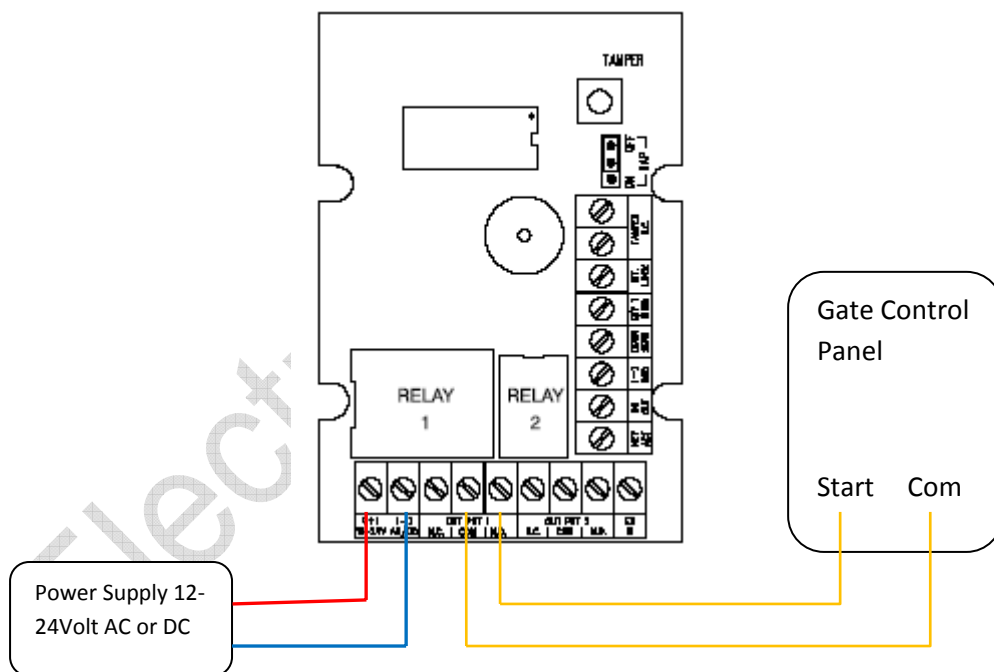
1) Key in **0000*** (This is the factory default programmers code)
2) Key in **8900#** (This sets the keypad to single user mode)
3) Key in **1 8321#** (This has set your general user code to 8321) or choose your own 4 digit numbers instead of 8321.
4) Key in **401#** (This sets output 1 to Momentary Mode for 1 second)
5) Key in *** (This exits the programming)

When you now dial in **8321** (or the number you chose) output 1 will close the circuit for 1 second

To change the factory default programmers code from **0000,** Key in **0000*** then **0 XXXX #** (XXXX being the number of your choice) Key in *** to exit.

Refer to the full instruction booklet for advanced operations.

Multi User Mode Quick Start

1) Key in your programmers code (**----*)**
2) Key in 8901# (this sets the system to multi user mode)
3) Key in 1 01 2244# (Group 1 position 1 code is now 2244#)
4) Key in 1 02 2245# (Group 1 position 2 code is now 2245#)
5) Key in 1 03 2246# (Group 1 position 3 code is now 2246#)
   In multi user mode, the # key must be used after the dialed number. Refer to the full instruction booklet for advanced operations.